

# 12CH Full 960H HDD Mobile DVR

## User Manual



Before installing and using, be sure to read the Manual, then you will properly use and protect your machine.  
The first part of the statement concerns the matters to be attention before installing and using.

---

➤ **Attention**

- To protect your rights, before using and installing, please carefully read the contents of the manual.
- This product is used for car inside, in order to prevent short-circuit or the risk of electric shock, do not make the machine in the rain or humidity environment.
- Event of any solid or liquid into the machine, please disconnect the power of the machine immediately, and ask the qualified technical staff to check, then restart it.
- The product is high-tech equipment; machines can not be repaired by users even very small original part. Once failure occurs, please ask for the qualified technical personnel, or contact with the dealer. Do not repair it by users themselves.

➤ **Installation Environment**

- 8-36V DC power supply, please confirm the local power supply before power on.
- If the machine were not used for a long time, please completely disconnect the video's power supply.
- Please select the appropriate location for the installation of the machine, where the air can flow freely around the machine to avoid overheating or water inflow.
- Machine can not be installed near the radiators, or near the ventilation road which is near heat, or directly under sunshine, or too much dust, or rain water, or near the area where the mechanical vibration or impact happens.

➤ **Package List**

Name	Quantity
HDD Mobile DVR	1
User Manual	1
Certificate of approval	1
Remote Control (not include battery)	1
Connecting Cable	3
Key	1

**Note: When the specification or parameters changes, no other announcement in addition.**

---

## Contents

1	Product Overview.....	3
2	Basic functions.....	3
2.1	Audio/Video Compression Format.....	3
2.2	Audio/video recording mode.....	3
2.3	Image quality when monitoring, recording, playback.....	3
2.4	Total Resources.....	4
2.5	Audio video synchronous recording.....	4
2.6	Access detection.....	5
2.7	Signal loss alarming function.....	5
2.8	Alarm linkage.....	5
2.9	Alarm pre-recording.....	5
2.10	Full duplex.....	5
2.11	Malfunction alarming function.....	5
2.12	Self-test the status and self-recovery.....	5
2.13	Front-end device control and multi-channel monitor and switch.....	6
2.14	Networking.....	6
2.15	Data backup.....	6
2.16	Authority, encryption, data safety.....	6
2.17	Log function.....	6
3	Features.....	7
3.1	Operating system.....	7
3.2	Compression format.....	7
3.3	Monitoring and Recording.....	7
3.4	Index and Playback.....	8
3.5	HDD storage and data backup.....	8
3.6	Control.....	8
3.7	Others.....	8
4	Technical Parameters.....	9
5	Instruction of Installation.....	11
5.1	Instruction of External Interface Wiring.....	11
5.2	Instruction of HDD Installation.....	13
6	Instruction of Using.....	16
6.1	Instruction of Front Panel.....	16
6.2	Instruction of Remote Control Operation.....	17
6.3	Menu Setting Instruction:.....	19
6.4	DVR Video Playback Instruction.....	31
6.5	Video Backup.....	33
6.6	PTZ control.....	33
6.7	Video Data Volume.....	34
6.8	Extranet Port Mapping.....	35
6.9	Domain binding setting.....	39

---

# 1 Product Overview

The four-channel /eight –channel /twelve–channel embedded digital hard disk video recorder is designed for car safety. It uses embedded processor and embedded operating system, combined with video / audio compression / decompression, GPS, car recorder, and the capacity hard disk storage technology to confirm the high intelligence and high stability. Widely used for bus, ship, train, and other areas of security.

## 2 Basic functions

### 2.1 Audio/Video Compression Format

The video adopts latest IS014496-10 (H.264) video compression technology, high compression rate to ensure a better image quality under less storage; the audio adopts ADPCM compression method, output a better voice with low distortion.

### 2.2 Audio/video recording mode

- Compression format

The audio video data are stored through special files, encrypted to prevent data loss under frequent power failure circumstances.

- Compression stream

Image quality with 8 levels and adjustable

**12 Channel 960H:** (192Kbps-2.0Mbps/channel)

to meet different requirements.

- Storage

2.5 inch SATA hard disk, 2TB maximum.

### 2.3 Image quality when monitoring, recording, playback

- Resolution Monitoring:

**12 Channel 960H:** 960\*576/CH; Recording: 960\*576/CH;

- Frequencies

The monitoring, recording and playback are all with 25fps or 30fps

- Horizontal resolution for monitoring



- 
- **12 Channel 960H:** 960\*576 /channel
  - Horizontal resolution for playback
  - **12 Channel 960H:** 960\*576 /channel

## 2.4 Total Resources

### 12 Channel 960H:

- Support 12 channels 960H (960\*576) simultaneous recording, total 360fps.
- Support 12 channels 960H (960\*576) simultaneous playback, total 360fps.

## 2.5 Audio video synchronous recording

- Record and playback the audio/video/GPS positioning data simultaneously. The information can be checked by CMS software which can be installed on computer.

## 2.6 Access detection

- When after open motion detecting video recording equipment in camera detects movement, the monitoring area can start recording, trigger the alarm, warning area size, location, number, area and alert in sensitivity or removal of alert, and other functions, can be set up.

## 2.7 Signal loss alarming function

- When the video signal gets lost, the device will send alarm signal via internet. Responding in less than 5 seconds with log information. NOTE this function will not work when a channel is not in recording status or if a channel is displaying in full screen.

## 2.8 Alarm linkage

- Support 4CH alarm input (8-36v high level voltage to trigger); 1CH alarm out (by relay, max. 500mA, switch ON); When the alarm is triggered, the audio recording will be started automatically (30-330s, adjustable). Alarm out will close for (5s-330s, adjustable) and send alarming signal, responding in less than 1s.

---

## 2.9 Alarm pre-recording

- Alarm video mode, alarm pre - recorded more than 5 s video, audio, positioning data.

## 2.10 Full duplex

- Under full loading status, users can index, playback the recorded data with no frame loss.

## 2.11 Malfunction alarming function

- When the DVR fail to work, the alarm switch is ON, showing alarm information for 5 minutes at least.

## 2.12 Self-test the status and self-recovery

- When in working status, the “RUN” indicator will constantly flashes and check the device. Recovery will take no more than 3 minutes when device crashes.

## 2.13 Front-end device control and multi-channel monitor and switch

- The DVR can control PTZ cameras through default protocols (RS-485, PELCO-D, 9600 baud rate),  
**12 Channel 960H:** 12 channels real time, switchable to monitoring mode.

## 2.14 Networking

- Combining the CMS software. With built-in 3G module, the car can be monitored remotely.

## 2.15 Data backup

- To backup the HDD data into computer via HDD card reader;
- Downloading the HDD data remotely through network.
- Transfer the HDD data to computer, download and play the media via our unique DVR player software. Users can also switch the HDD files into universal AVI format to make it workable in other players.

---

## 2.16 Authority, encryption, data safety

- Enter the DVR by password, default for “6666”. Data is stored in a special file system to ensure it's encrypted and safe..

## 2.17 Log function

- The log includes the alarming and malfunction information, stored into HDD. It can be checked via computer.

## 3 Features

### 3.1 Operating system

- Embedded Linux operating system, high stable, free from virus.
- English/ Chinese/ Russian/ Portuguese menu switchable.
- Graphical user interface

### 3.2 Compression format

- H.264 format: more excellent frame rate, quality image output

### 3.3 Monitoring and Recording

- Monitor:  
**12Channel 960H:** 12CH 960H (960\*576 )
- Record:  
**12 Channel 960H:** PAL 300fps, NTSC 360fps, full real-time 12CH 960H (960\*576 ) recording.
- Record mode: by alarm, schedule, manual, motion detection.
- Support **12 Channel 960H:** 12CH video and 12CH audio meanwhile recording.
- Record image quality: 8 levels adjustable
- Video recorded in special file system to ensure lifespan and safety of HDD
- Reliable evidence with unchangeable audio/video data.

---

## 3.4 Index and Playback

- Index and playback by time.
- Support  
**12Channel 960H:** 12CH video, 1CH audio (any channel can be chosen) ,  
index and playback at the same time, support amplifying in one channel.
- Data only played by DVR playback software

## 3.5 HDD storage and data backup

- Support 2.5 HDD max 2TB.
- The HDD data can be backed up via PC software.
- Support USB backup.

## 3.6 Control

- Dual MCU control, to ensure DVR stability.
- Support remotely control by remote controller

## 3.7 Others

- Upgrade through USB , easy to maintain.
- Protect by password, to avoid data damage.
- Delayed shutdown: default for 5s, adjustable
- Anti-pulse and low voltage protection
- Real-time timer
- Anti-shock for the PCB panel and parts.
- Watch dog function to avoid system crush.


## 4 Technical Parameters

Items	Device parameters	Performance index
<b>Name</b>	Product Name	12 Channel Mobile DVR(HDD Storage)
<b>System</b>	Operation System	Linux
	Operation Interface	Graphical Interfaces, Chinese/English optional
	File System	Proprietary Format
	System Privileges	User Password
<b>Video</b>	Video Input	12ch Independent Input: 1.0Vp-p, 75Ω.Both B&W and Color Cameras
	Video Output	1 Channel PAL/NTSC Output, 1.0Vp-p, 75Ω, Composite Video Signal
	Video Display	1 Or 12Screen Display
	Video Standard	PAL:25frames/Sec;NTSC:30frames/Sec
	System Resources	PAL:300 Frames; NTSC:360 Frames
<b>Audio</b>	Audio Input	12 Channels Independent Input 600Ω
	Audio Output	1 Channel(12 Channels Can Be Convert Freely)
	Basic Output Level	1.0—2.2V
	Distortion Plus Noise	≤-30dB
	Recording Mode	Sound And Image Synchronization
	Audio Compression	ADPCM
<b>Digital Processing &amp; Storage</b>	Image Compression	H.264 Fixed Code Stream
	Image Format	12*960H (960*576) , 12*D1 (704*576)
	Video Stream	1.0M-6.0Mbit/s
	Video Taking Up Of Hard Disk	450M-2.6GByte/hour
	Playback Resolution	1or12*960H, 1or12*D1
	Audio Bitrate	4KByte / s / channel
	Audio Taking Up Of Hard Disk	14MByte / hour / channel
	HDD Storage	Support Max 2TB
	Image Quality	Eight Grades to Choose
<b>Alarm</b>	Alarm in	8 Channels Independent Input. High Voltage Trigger
	Alarm out	2 Channels Independent output
	Move Detect	available
<b>USB Interface</b>	Host Access	Can Expand One For USB Disk Backup
<b>Network Interface</b>	Wire line Access	Can Expand One RJ45 Ethernet Port
	Wifi	Can Expand One Wifi Module Inside
	3G	Can Expand One WCDMA or CDMA2000 Module Inside
<b>GPS Interface</b>	GPS	Can Expand GPS Module Inside
<b>Extend Interface</b>	RS232	Extensible,it is convenient to connect with other vehicle equipment
	RS485	Extensible,it is convenient to connect with other vehicle equipment and PTZ Camera
	Intercom	Can Expand Intercom Module Inside
	G-Sensor	Can Expand G-Sensor Module Inside
	Canbus	Can Expand Canbus Module Inside

<b>Others</b>	Power Consumption	DC8-36V 5% ≤12W
	Working Temperature	-20℃ ~ +85℃ ≤80%
	Clock	Built-In Clock, Calendar
<b>Packaging</b>	Product Size	245(L)*190(W)*71(H)mm (with Holder)
	Product Weight	3.4KG(without HDD)
	Package	Each In a Box, 5 set/Canton
	Box Size	245(L)*190(W)* 71(H)mm
	Carton Size	650(L)*375(W)* 255(H)mm
	Carton Weight	14kgs/ 18kgs (without HDD)

5 Instruction of Installation

5.1 Instruction of External Interface Wiring

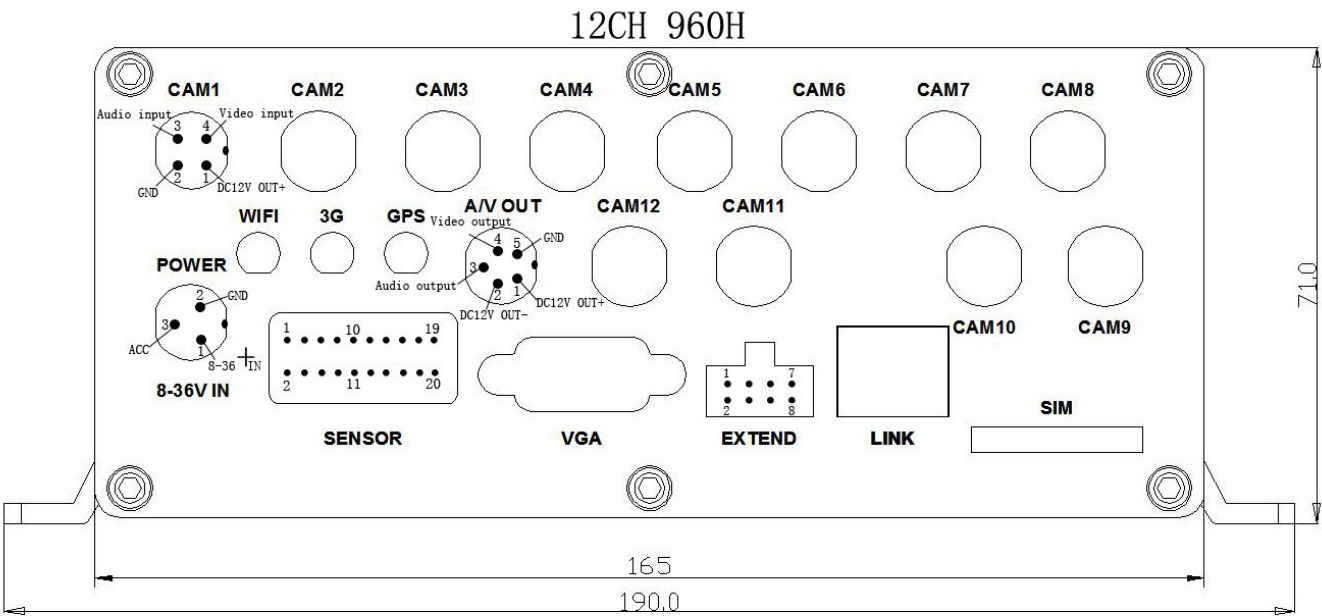

SENSOR Interface definition:

1	Canbus+	11	Alarm input 1
2	Canbus-	12	Alarm input 3
3	RS485+	13	Alarm input 2
4	RS485-	14	Alarm input 4
5	Alarm outputCOM	15	Alarm input GND
6	Alarm outputCOM	16	Alarm input GND
7	Alarm outputCOM	17	Alarm input 5
8	Alarm outputCOM	18	Alarm input 7
9	Alarm input GND	19	Alarm input 6
10	Alarm input GND	20	Alarm input 8

EXTEND Interface definition:

1	DC12V OUT+
2	DC12V OUT-
3	Audio input
4	Audio output
5	RS232 (RX)
6	Video output
7	RS232 (TX)
8	Video/Audio GND

---

Remarks:

- If the power supply is 12V, then the current of 12V output can be just 1A. So if there are more than 3pcs cameras, we suggest customers to get power for other cameras from the 12V vehicle power directly or use Our special car power supply.
- RS485 、RS232 、LINK、 CANBUS interface are optional interface, available only when you listed in the order for this interface.
- Ports:  
DEBUG: testing port  
EXTEND: intercom connecting port  
SENSOR: alarm port

## 5.2 Instruction of HDD Installation




1





2




3

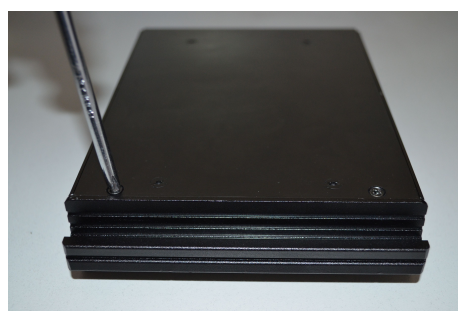

4

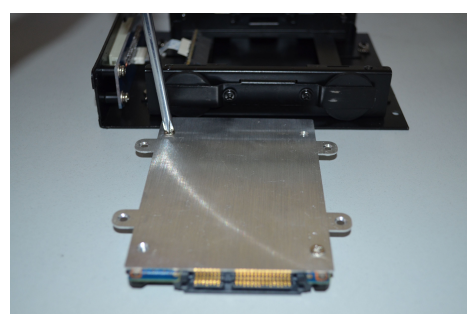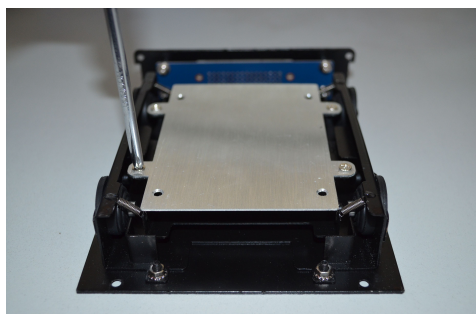


5

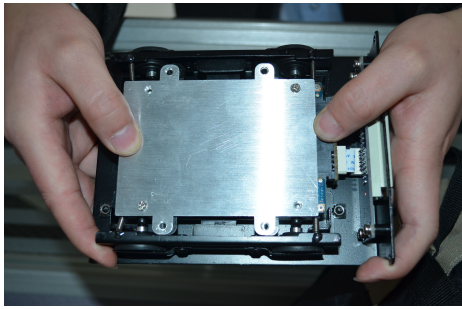

7


6

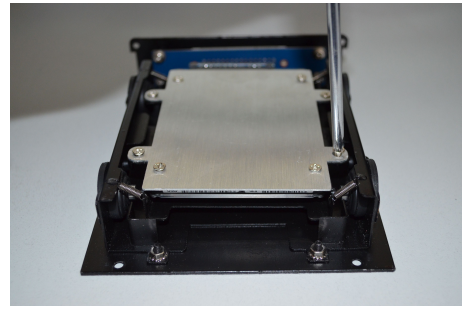

8



9

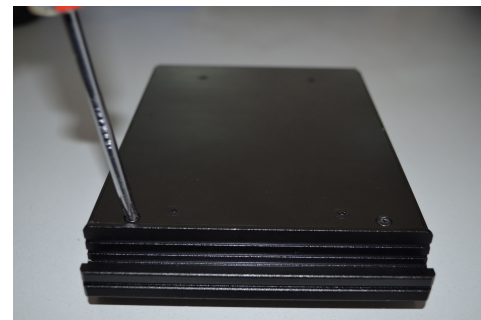

10



11



12

Make sure whether power switch is turned on or turned off, if it is turned on, please use the key, turn the indentation on the "turn off" position.

- Pull the front panel of the hard drive box. Carry out the hard drive and drop it on the table.
- Set down the two screws of the hard drive by cross-screwdriver.
- Drop the under backer of hard drive box, and then check the line whether it is on top of the under backer or not.
- Bring here the SATA hard drive which needs installation; connect the line joint of hard drive box to the hard drive. Please note the heading of the line while connecting. Make sure all of the connecting is complete done.




- Put the hard drive in the hard drive box. The obligate line of hard drive needs longer, the line of hard drive needs to lie on the right position.
- Let the four white screws of the machine through the center hole of the four shockproof rubber pads. Fix hard drive on the four holes of hard drive box, do not make the screws too taut, leave a little space for hard drive to move. So it can reach a perfect effect.
- Insert the hard drive under backer which has hard drive to the hard drive top backer, and then, use cross screwdriver and the screw to fix the under backer and the top backer.
- Aimed the hard drive box towards the groove of the front board, level push. Please note the face and back while pushing. Upturn the silk-screen on the right position.
- Wring the lock of the front board by key. Turn the groove on the “turn on” position, lock hard drive box to prevent hard drive from moving out.

Note : Hard drive fixing lock besides fixing the hard drive, also take the place of host power switch .So do this operation, make sure all lines are completely connected. Otherwise, if car's power have been connected with the standard input voltage, the machine should be destroyed. So while installation, if the line has not been completely connected, please stop to do this step. More careful when installation. The hard drive can not roll out even it has not been locked.

## 6 Instruction of Using

### 6.1 Instruction of Front Panel

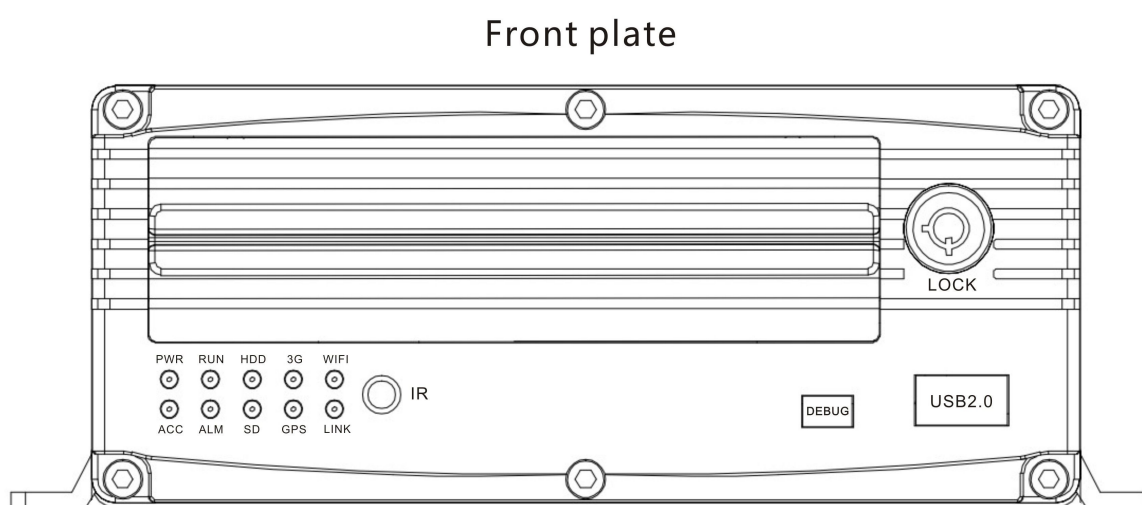

- **LED**




- ✓ **PWR LED:** lighting while work starts. Power LED on.
- ✓ **RUN INDICATOR:** flashing when machine work well
- ✓ **HDD INDICATOR:** record, play, backup data flashing
- ✓ **3G INDICATOR:** When with 3G or WIFI module, or with LINK, this led will be on if the settings are all right and the network connects well
- ✓ **Wifi INDICATOR:** When with WIFI module, it will be on if WIFI module works well.
- ✓ **ACC INDICATOR:** ACC controller signal regularly, it would indicate
- ✓ **ALM INDICATOR:** When have alarm signal, it would be on, when alarm signal disappear it would be off.
- ✓ **SD INDICATOR:** When the model has SD card storage function, SD card read normally then it would indicate.
- ✓ **GPS INDICATOR:** with GPS module, DVR work well indicate
- ✓ **LINK INDICATOR:** when wired network connect normally, it would indicate.

## ● Key and Other Descriptions









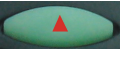
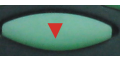






- ✓ DEBUG: Debug interface
- ✓ SIM interface: 3G interface
- ✓ IR: infrared receiving window.
- ✓ LOCK: while removing the hard drive, use the key to unlock in order to remove the hard drive, unlock after machine's auto-disconnects the power, the power auto-connect after being locked.
- ✓ USB: backup the video data of hard drive via USB .







NOTE: Recommend to use the SanDisk brand of the USB disk , the minimum volume 256M, must support the FAT32 file system.

## 6.2 Instruction of Remote Control Operation

- : Record
- : ①Lead to menu; ②Return key
- : Enter the submenu to do the settings and also confirm the settings





- 
- : For playback on the mobile DVR
  - : ①Stop when record and playback; ②Delete key
  - : Pause/Play when playback
  - : Into PTZ control mode.
  - : Mute key, to turn on or turn off audio output when playback videos with audio.(The audio input of the playback device must be connected to the audio output of the DVR.)
  - : Fast-forward when video playback, play speed can be x2, x4, x8, press one time is x2, press two times is x4, and press 3 times is x8.
  - : ① Exit when video playback or backup. ② Exit from PTZ mode.
  - : Character shortcut key: Press A-B to get all characters
  - : ①Upward for MENU selection. ②"UP" direction for PTZ control mode.
  - : ①Downward for MENU selection. ②"Down" direction for PTZ control mode.
  - : ①Towards to left for MENU selection or MENU setup. ②"Left" direction for PTZ control mode.
  - : ①Towards to right for MENU selection or MENU setup. ②"Right" direction for PTZ control mode.
  - : ①screen zoom the first channel video when surveillance, record  
②Enter password or set system password.  
③Num shortcut key: Press A-B to get all characters
  - : ①screen zoom the second channel video when surveillance, record  
② Enter password or set system password.
  - : ①screen zoom the third channel video when surveillance, record  
② Enter password or set system password.
  - : ①screen zoom the fourth channel video when surveillance, record and playback  
② Enter password or set system password.

- : ①screen zoom the fifth channel video when surveillance, record and playback  
②Enter password or set system password.
- : ①screen zoom the sixth channel video when surveillance, record and playback  
②Enter password or set system password.
- : ①screen zoom the seventh channel video when surveillance, record and playback  
② Enter password or set system password.
- : ①screen zoom the eighth channel video when surveillance, record and playback  
②Enter password or set system password.
- : ①screen zoom the ninth channel video when surveillance, record and playback  
②Enter password or set system password.
- : ①4 channel /8 channel /12 channel display when surveillance, record and playback.  
②Enter password or set system password.


**Remark: When the DVR is in alarm condition, the remote control is invalid.**

**How to switch or change input method:**

**Switch to digital:** Press  and  into digital.


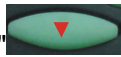
**Switch to letter:** Press  .


**Delete numbers or letters:** select the number or letter you want to delete firstly, then press

 to delete it.

**Add a number or letter:** press  .


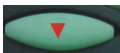


## 6.3 Menu Setting Instruction:

First press ""key, next press "" to enter the default password"6666",

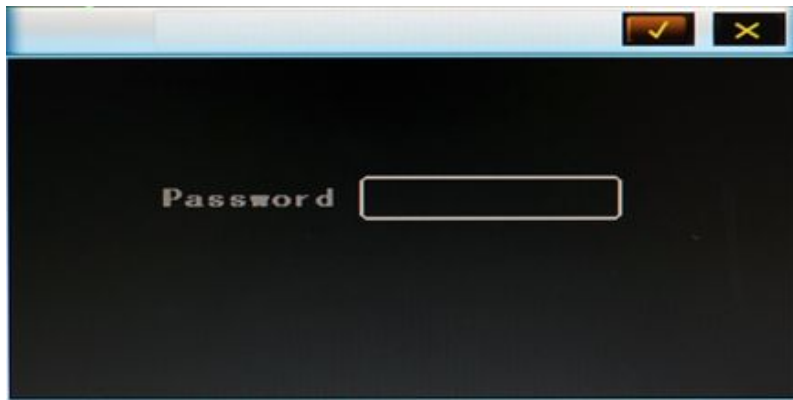


then press "OK" to enter the main menu interface;

There are "System", "Disk", "Record", "Playback", "Network" and "Alarm" options, select the option by

pressing these buttons , , , , then press "OK" to enter.


**Basic Settings:** includes options of "system setting", "PTZ setting", "system info", "vehicle info" . .

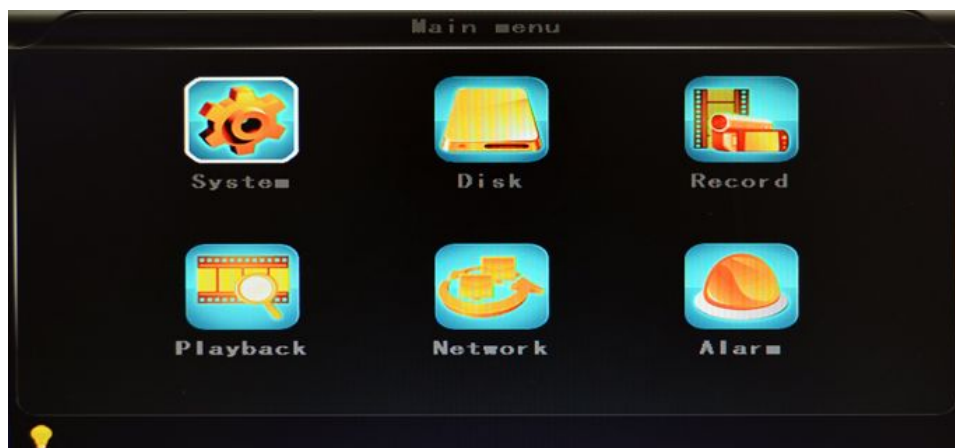

#### ■ System Setting: " Setup" and "Info "








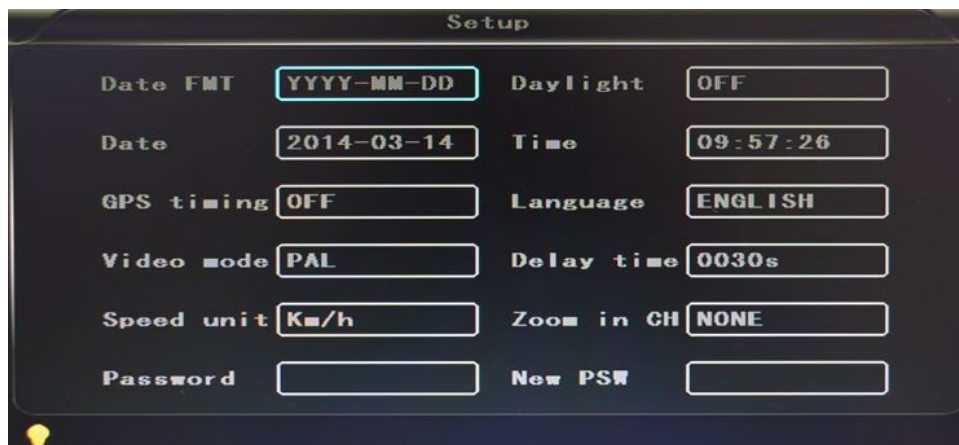



- **Setup:** Set the System time, Car Number, TV system, Language, etc.

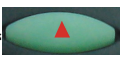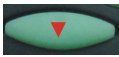


- ✓ **Date format:** Offer 3 display methods like “y/m/d, m/d/y, d/m/y” for personal habit.
- ✓ **Daylight saving time:** suitable for according countries or areas.
- ✓ **Date:** Adjust the date of HDD recorder
- ✓ **Time:** Adjust the time of HDD recorder
- ✓ **Time zone:** differs by countries, e.g: China for UTC+08
- ✓ **Language:** Set "Chinese" or "English", have to restart the DVR after setting.
- ✓ **Video Mode:** Set "PAL" or "NTSC", have to restart the DVR after setting.
- ✓ **Delay Time:** DVR Time-lapse turn off function after the car ignition off, the default time is 5S, and 30s,60s,120s,300s,600s,1200s,1800s,3600s,7040s all could be set , have to restart the DVR after setting.
- ✓ **Speed unit:** KM/H and M/H, e.g: China is KM/H
- ✓ **Amplifying channel:** Choosing which channel to see when power on each time. This is also useful when backing the car.
- ✓ **Password:** Enter the default password before changing the new password(**Note: You have to enter the original password after press "OK", otherwise the DVR will keep staying in the changing password status, and the remote control will not work.**)
- ✓ **New password:** Enter the new password

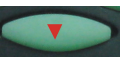
#### Operating Way:

Enter the menu, press  ,  to select the options ,then press  to enter the modification mode, adjust the number by pressing  ,  ,  ,  , press  to save after adjustment. Press  key to exit after all settings done.


- PTZ settings: Adjust and control the camera with external PTZ device.

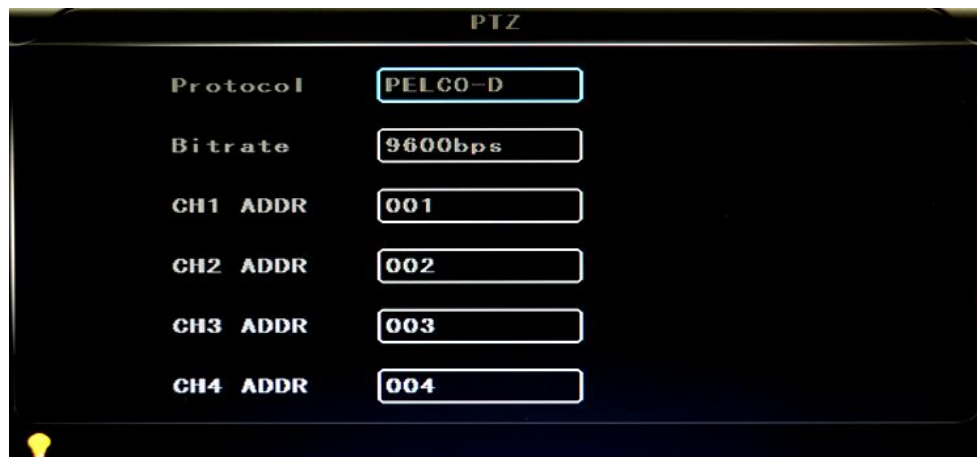


- ✓ Protocols: default PELCO-D, support PELCO-D.PELCO-
- ✓ Bit rate: under RS485 port: 2400bps,4800bps,9600bps,38400bps,57600bps
- ✓ Channel-Address: Channel one-Device address
- ✓ Channe2-Address: Channel two-Device address
- ✓ Channe3-Address: Channel three-Device address
- ✓ Channe4-Address: Channel four-Device address
- **System Info:** Display DVR hardware code number, software version information( only view, couldn't be changed); Reset the Factory Settings

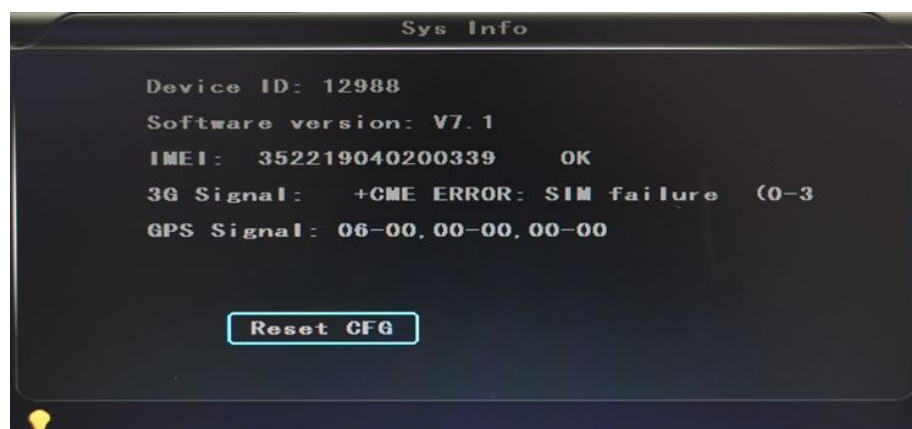


- ✓ Device encoding: only for this DVR, the code is unique.
- ✓ Software version: the version No. of DVR software.
- ✓ IMIE: IMIE No. of 3G network or module
- ✓ Strength Of 3G signal: strength value:99, unknown: 0-31
- ✓ Strength Of GPS signal: AA-BB(AA: GPS No.;BB: GPS strength. Show signal strength of max.3
- ✓ satellite each cycling time.
- ✓ Reset the Factory Settings:


- ✓ Select “Reset CFG”, there is a Reset interface after press“”,confirm to Reset ,cancel to return the original interface.

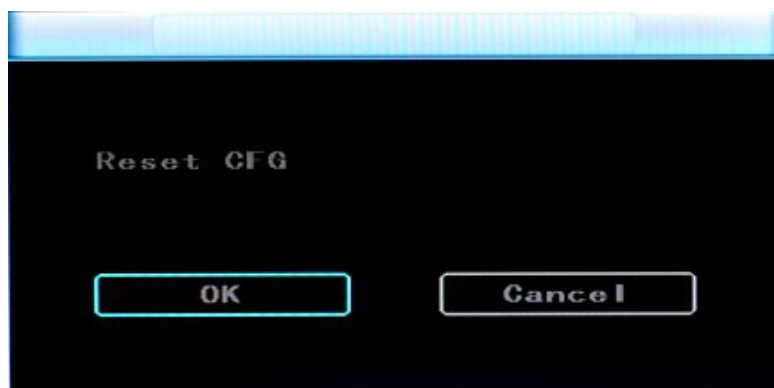

- Car information: details of car plate number, route and driver code.

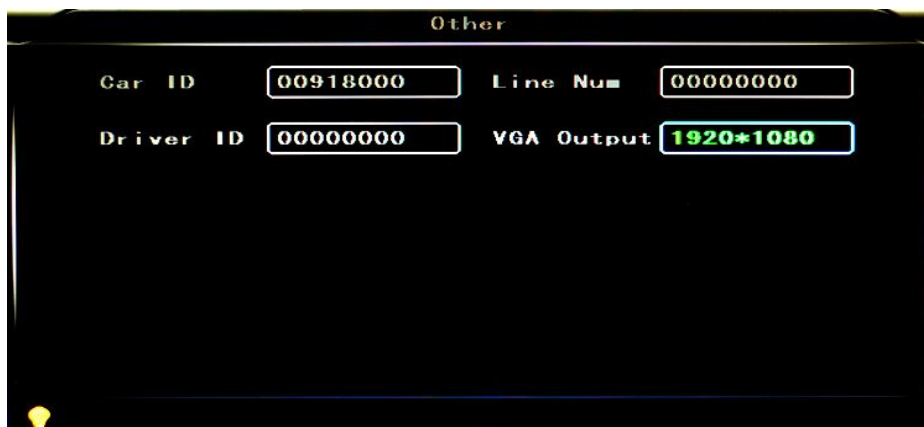

- ✓ Car plate number: can be showed by English, Chinese simplified language, Numbers or common symbols.
- ✓ Route: the driving route and code
- ✓ Driver code: set up the driver code information
- ✓ VGA Output:1920\*1080
- G-sensor:

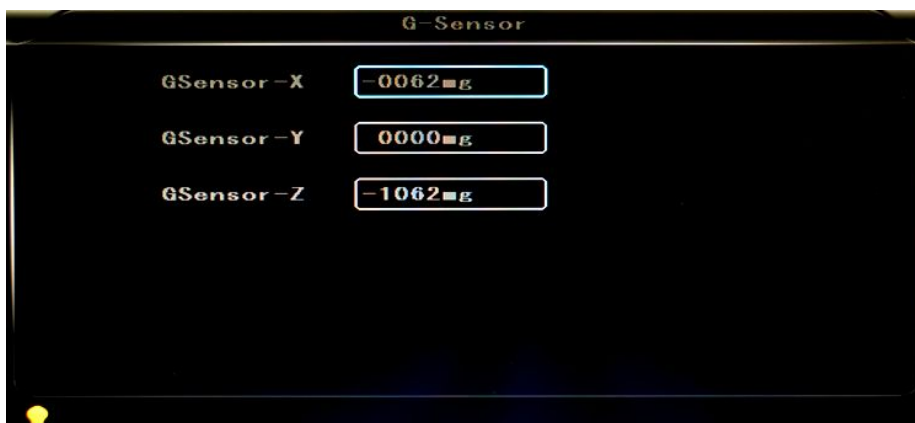


- ✓ GSensor-X: 0000mg( default value, this value will change accordingly if the X direction gravity



accelerated speed value is changeable)

- ✓ GSensor-Y: 0000mg(default value, this value will change accordingly if the Y direction gravity accelerated speed value changeable )
- ✓ GSensor-Z: 0000mg(default value, this value will change accordingly if the Z direction gravity accelerated speed value is changeable)
- LOG information

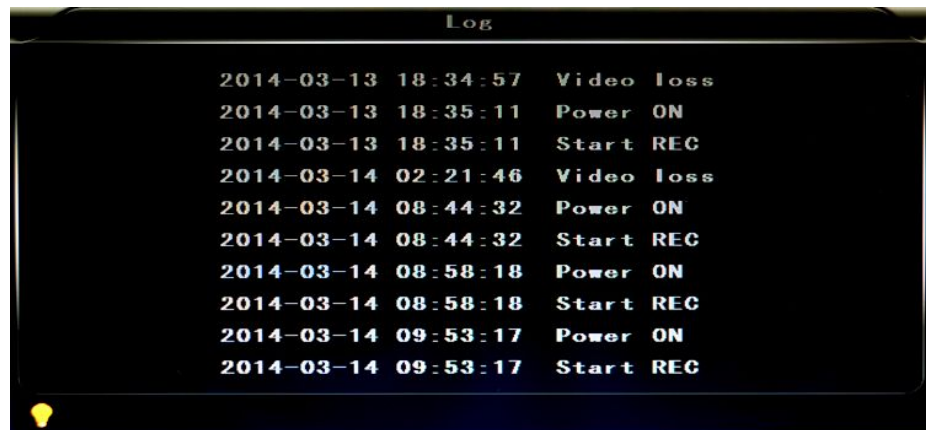


- ✓ User action log, alarm logging, equipment status log

■ **Disk:** Check and format



- ✓ **Disk Name:** Display the system recognized HDD name
- ✓ **Total Size:** Display the total size of HDD
- ✓ **Free Size:** Display the remaining Capacity of HDD
- ✓ **Format:** Format HDD(only format the head files of HDD)

Select this item, there is a format interface after press "OK", confirm to format, cancel to return the original interface.

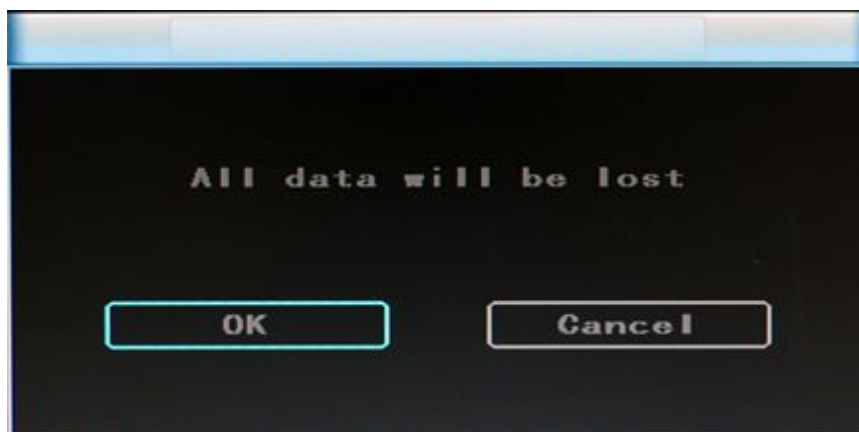


■ **Record:** the video files setting



- ✓ **Channel:** select the channel setting (the information of each channel could be set independently)
- ✓ **Resolution:** CIF/HD1/D1;  
The left side is the local storage information,  
The right side is network transmission information; local “CIF,HD1,D1”is optional, only “CIF” for network transmission
- ✓ **Frame:** 1-25/30fps  
The left side is local storage information,  
The right side is network transmission information.
- ✓ **Quality:** Video quality setting  
The left side is the local video quality(total 8 grade, LOWEST—HIGHEST)  
The right side is the network transmission quality( total 9 grades,  
32kbps/48kbs/64kbps/80kbps/112kbps/144kbps/192kbps/256kbps/384kbps)
- ✓ **Rec mode:** VIDEO ,Audio +Video (A+V) ,No record (N)
- ✓ **File Len:** the packaged video files length setting  
(300/600/900/1200/1500/1800/2100/2400/2700/3000/3300/3600s optional)
- ✓ **Save:** save after finished video parameter setting (have to restart the DVR after setting.)

The operating method is similar to the "basic settings" operating

■ **Playback:** the recorded video Playback

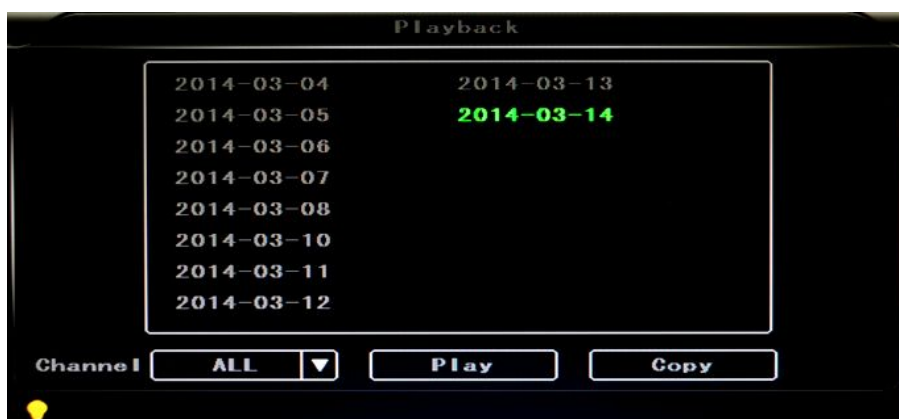


There are video date in the menu, it will display the vide time after enter the date, choose the playback time range as needed, press "Play" or click the interface "Playback "button to replay the video. Said is power outage file suffix "\_P", suffix "\_S" indicates an alarm trigger video files.

- ✓ **Channel:** 1CH/4CH/8CH/12CH Video playback; video playback on each channel or full screen, playback and record simultaneously
- ✓ **Play:** Select the video files and channel to replay
- ✓ **Copy:** Select the HDD video files backup to USB Disk

The operating method refers to "local video playback instruction"

■ **Network Setting: LAN, 3G, WIFI**

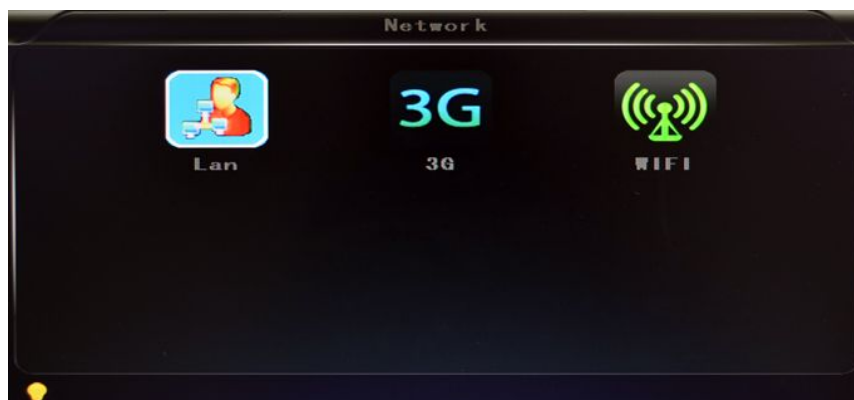


- ✓ **LAN:** connecting via RJ45
- ✓ **3G:** insert 3G SIM card into the slot
- ✓ **WIFI:** connecting the network of WIFI
- **Local Network Setting (LAN):**

Lan	
Net type	LAN
Static IP	192.168.002.015
Gateway	192.168.002.100
Sever IP	192.168.002.033
DHCP	ON
Net mask	255.255.255.000
DNS	202.096.133.034
Sever port	8101

- ✓ **Network Type:** LAN / 3G-WIFI optional
- ✓ **DHCP:** Automatically get the IP address( in order not conflict with the LAN, pls enable ON, and also enable DHCP on the router, P.S, only one DHCP server can be enable in one LAN)
- ✓ **Static IP:** setup under LAN and WIFI mode
- ✓ **Net mask:** Subnet mask under LAN or WIFI mode
- ✓ **Gateway:** gateway under LAN or WIFI mode
- ✓ **DNS:** Pls input when the server IP is DNS, and not necessary when IP is static.
- ✓ **Server IP:** If the units login on our server, pls use 221.204.237.94, and if the units login on your own server, pls use yours.
- ✓ **Server Port:** Keep it as default of 8101
- **3G Network Setting:**
  - ✓ **Net type:** select 3G-WIFI if you are going to use 3G mode.
  - ✓ **DHCP:** ON

Lan	
Net type	3G-WIFI
Static IP	192.168.002.015
Gateway	192.168.002.100
Sever IP	192.168.002.033
DHCP	ON
Net mask	255.255.255.000
DNS	202.096.133.034
Sever port	8101

- ✓ Access into “**Network**”→”**3G**”

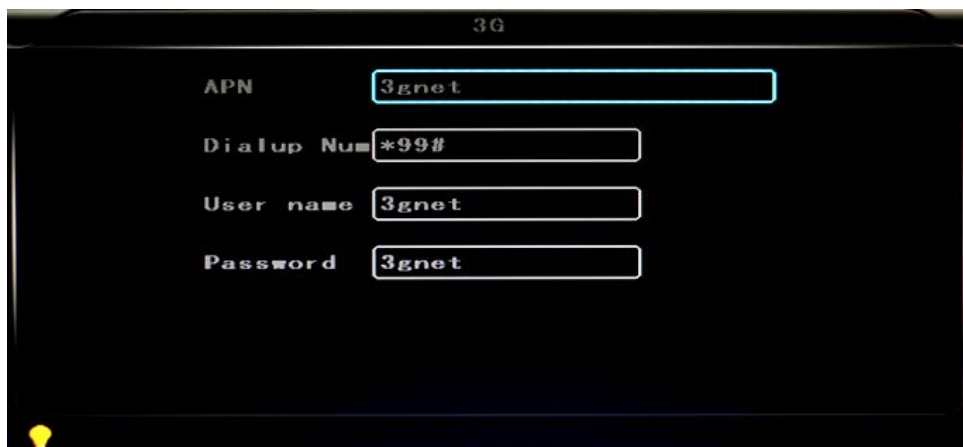

- ✓ **APN:** Access Point Name
- ✓ **Dialup Num:** Get this info from your carrier
- ✓ **User Name:** Fill in if you have
- ✓ **Password:** Fill in if you have

**Note:** Pls make sure you select the proper SIM card fit for 3G module.

Here is a example for Chinese carrier.

	WCDMA	EVDO
APN:	3gnet	card
Dialup Num:	*99#	#777
User name:	3gnet	card
Password:	3gnet	card

- **WIFI Setting:**

- ✓ **Net type:** Select 3G-WIFI when the type is under LAN.
- ✓ **DHCP:** ON



- ✓ Access Network setup →“WIFI”



- ✓ **SSID:** WIFI router device name.
  - ✓ **Password:** using password for SSID
  - ✓ **Certificate:** Support both “WPA-PSK” and “WPA2-PSK”
  - ✓ **Encryption:** Support both “CCMP” and “TKIP”
- ✓ Access router, check its “WIFI “encryption.




#### Notes:

Pls make sure the router WIFI encryption keep the same with the setup in MDVR if the units use WIFI.

## ■ Alarm :



- ✓ **Alarm REC:** Alarm-triggered video duration (30-330s optional, 30s unit)
- ✓ **Positioning Interval:** GPS Data upload interval, used with other system interface
- ✓ **Alarm out:** Alarm output time (5s-900s)
- ✓ **Over speed:** Set the over speed alarm value
- ✓ **Motion Detect:** Open and close motion detect record and motion detect sensitivity selection such as "off", "high", "medium", "low". Opening motion detect recording, also need to set the icon "S" (alarm record) for time range of the detect record in "Record Setting" status except select "High", "Medium", "Low". "High", "Medium", "Low" is the grade of detect sensitivity, higher grade, record easier.
- ✓ **DET AREA**

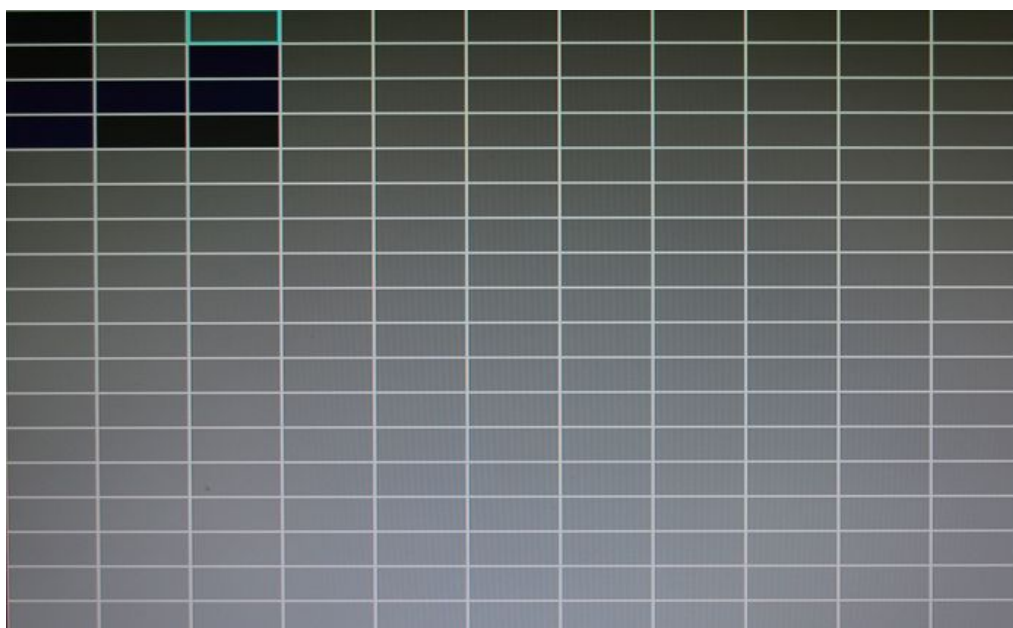

: No detect
  : Low sensitivity
  : High sensitivity

- ✓ **Record Sequence:** Set the record mode of the different time range



**White blank:** no record

**Red blank:** record

















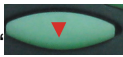







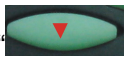

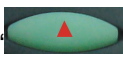
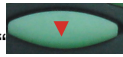
**S blank:** Alarm record

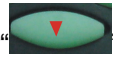If the record mode set to “continuous recording” or alarm recording, the remote control stop key

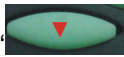


“ ” will not work.

## 6.4 DVR Video Playback Instruction

Enter the main menu, move to “search/playback” option, press “” to enter, next press the key “” or “” to select the playback date, then press “” key to display the video files of the selected date (file named by the record time), same press “” or “” again to select the time to play. If your required time is not available in the current page, press “” or “” key to the next page, till you find the required time, then press “” key to move the option “play channel”, again press “” to select the playback channel. If you need to reselect the files, press keys “” or “” to repeat the previous steps to select again, then press “”. Press “” or “” to select the replay channel, then press “” or press “” to button “playback”, next press “” to replay, the system will switch to the video playback status, you can see the playback video in the selected channel. Press “”, “”, “”, “” keys to switch the channel, and press “” back to the quad screen. Press “” to stop, press again for replay. Press “” to exit and back to 4ch record status, press “” and back to the “search/playback” interface, then press “” or “” to select other video playback.



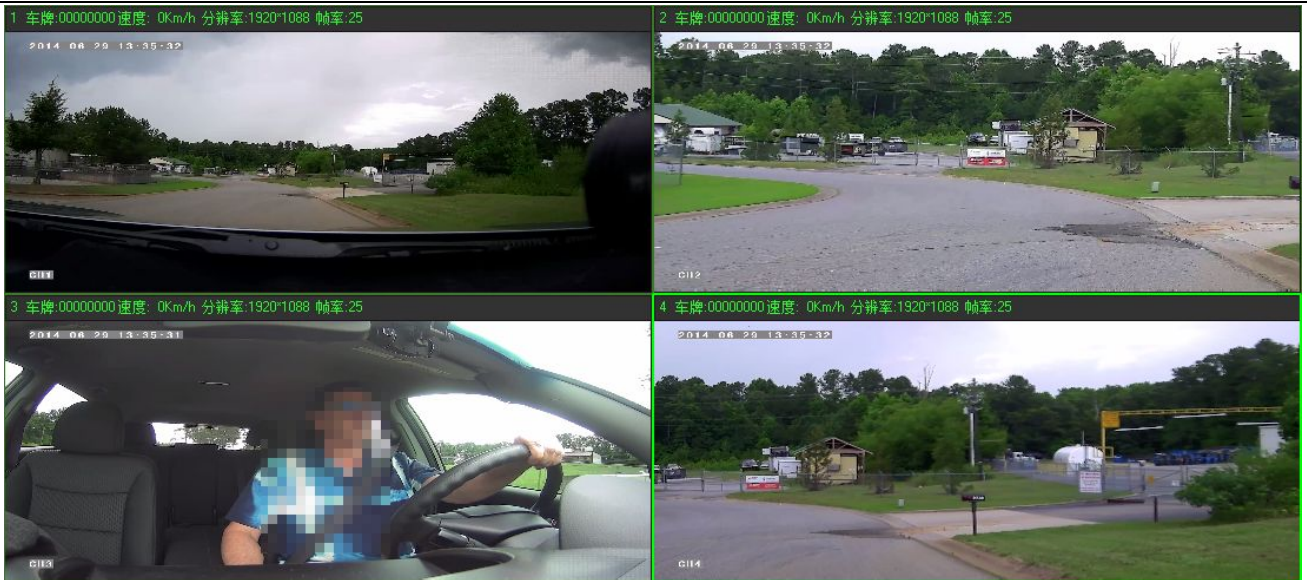



## 6.5 Video Backup

Our company System support 2 video backup ways.

- 1) Connect the USB disk to the DVR's USB port for backup (Ports on Demand); Operating method as follows:

- Connect USB disk to the DVR's USB port ( FAT32 format, backup Max.20G);
- On the video playback interface,select the backup video files first,then move to“backup”option,and press “OK”to backup, “COPY END”display after backup finished,the USB disk could be taken

away,then press“”to exit if no other operations.





- If you need to backup another files,press“”to repeat the previous steps to backup。


2) Take the HDD box out from DVR, then connect the HDD reader to the PC, you can check the video playback on PC via the installed our company's local playback analysis software .( Suitable for large amount data backup, simple and flexible. The proprietary data files also could be converted to the common format, suitable for different reading demands). Specifics refer to the local playback analysis software instruction).

## 6.6 PTZ control

This function just used to has PTZ function models。Operations are as followings:

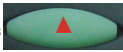When DVR is working, click“”, entre“PTZ control”mode,If DVR has connect with screen, then on

screen's left above would show “PTZ”,click“”, “”, “”, “”, PTZ would scroll as it shows, the ptz camera would rotate after each command by clicking ptz icon in the cms or operating the

control board; Control over if wanna quit at all, click“”。


## 6.7 Video Data Volume

The required volumes of video and video-related settings , please see the following table:


12CH 960H		
VIDEO QUALITY	Total Record Frame	Data Size Per Hour
2.0 Mbps	300 frame	10.8GB
1.5 Mbps	300 frame	7.95GB
1.2 Mbps	300 frame	6.3 GB
1.0 Mbps	300 frame	5.4 GB
768 Kbps	300 frame	4.05GB
512 Kbps	300 frame	2.7 GB
320 Kbps	300 frame	1.65GB
192 Kbps	300 frame	1.01GB
Note: Based on users matching conditions to apply the appropriate drive and related settings.		

## 6.8 Extranet Port Mapping

- ✓ Install the CMS server in LAN, Pls refer to the manual how to install CMS server.
- ✓ First, make sure the PC which installed the server use **Static Public IP**, not automatically get.

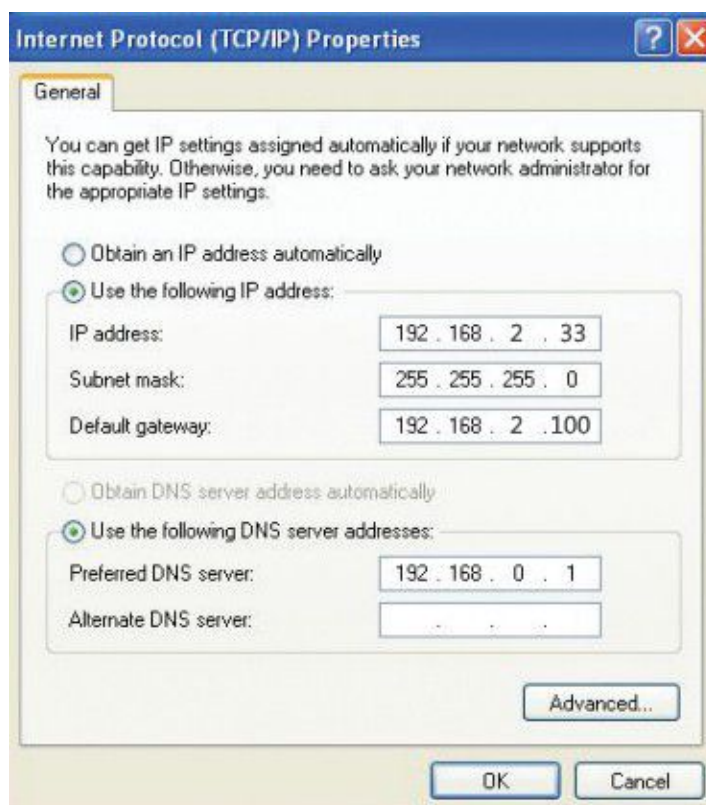

- ✓ Access into “Program”→”Run”→”CMD”, fill in “ipconfig”→”Enter” to see if the server IP has been set successfully.

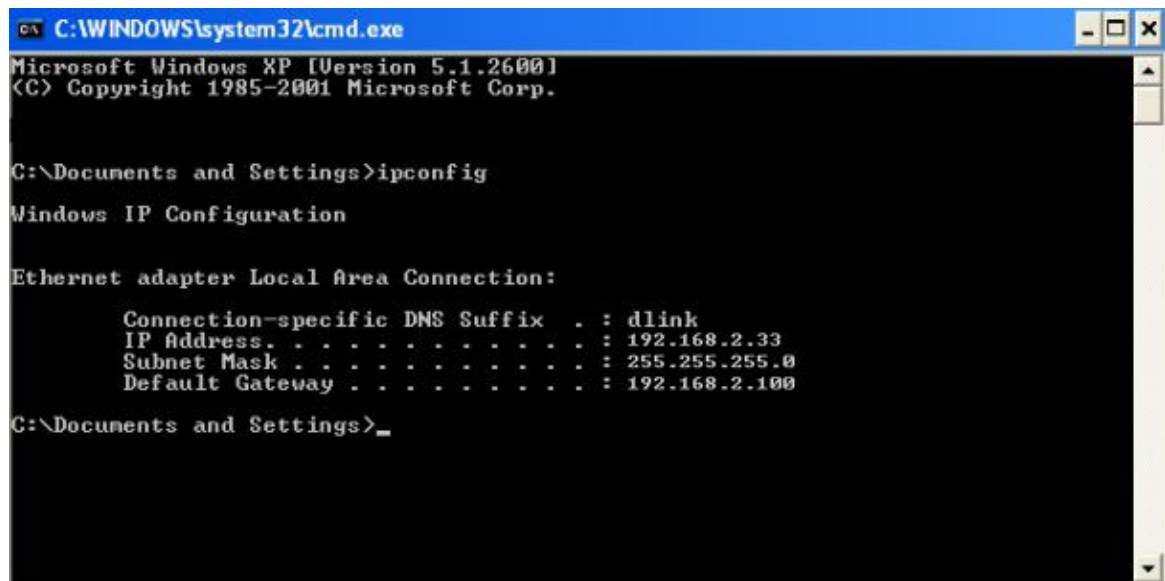

```
C:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . : dlink
    IP Address. . . . .               : 192.168.2.33
    Subnet Mask . . . . .             : 255.255.255.0
    Default Gateway . . . . .         : 192.168.2.100

C:\Documents and Settings>
```

- ✓ Open the file of “DVR\_Server.cfg” in the server installation path, can check whether the ports have been set successfully.

Port: 8001, 9001, 8101



```
DVR_Server.cfg - 记事本
文件(F)  编辑(E)  格式(O)  查看(V)  帮助(H)

[Server]
Server_port=8001
Client_port=9001
TCPServer_port=8101
UserName_Num=1
UpdatePass=0
GpsPlayer_dis=30
[SendGPS]
Gps_IP=127.0.0.1
Gps_Port=9009
Gps_Stauts=2
debug_status=0
[UserName00]
Name=admin
Password=admin
MaxNum=0

Ln 16, Col 2
```

- ✓ Access into router→”Advanced”→”Port forwarding “



D-Link

<b>DIR-835</b> //	<b>SETUP</b>	<b>ADVANCED</b>	<b>TOOLS</b>	<b>STATUS</b>	<b>SUPPORT</b>
-------------------	--------------	-----------------	--------------	---------------	----------------

VIRTUAL SERVER

PORT FORWARDING

APPLICATION RULES

QOS ENGINE

NETWORK FILTER

ACCESS CONTROL

WEBSITE FILTER

INBOUND FILTER

FIREWALL SETTINGS

ROUTING

ADVANCED WIRELESS

WI-FI PROTECTED SETUP

ADVANCED NETWORK

GUEST ZONE

IPv6 FIREWALL

IPv6 ROUTING

**PORT FORWARDING RULES :**  

This option is used to open multiple ports or a range of ports in your router and redirect data through those ports to a single PC on your network. This feature allows you to enter ports in various formats including, Port Ranges (100-150), Individual Ports (80, 68, 888), or Mixed (1020-5000, 689).

Save Settings
Don't Save Settings

**24 -- PORT FORWARDING RULES**

	Name	<<	Application Name	>>	Ports to Open	Schedule
<input type="checkbox"/>	IP Address		0.0.0.0		TCP	Always
					UDP	Inbound Filter
						Allow All
<input type="checkbox"/>	IP Address		0.0.0.0		TCP	Always
					UDP	Inbound Filter
						Allow All
<input type="checkbox"/>	IP Address		0.0.0.0		TCP	Always
					UDP	Inbound Filter
						Allow All
<input type="checkbox"/>	IP Address		0.0.0.0		TCP	Always
					UDP	Inbound Filter
						Allow All

**Helpful Hints...**

Check the **Application Name** drop down menu for a list of predefined applications. If you select one of the predefined applications, click the arrow button next to the drop down menu to fill out the corresponding field.

You can select a computer from the list of DHCP clients in the **Computer Name** drop down menu, or you can manually enter the IP address of the LAN computer to which you would like to open the specified port.

Select a schedule for when the rule will be enabled. If you do not see the schedule you need in the list of schedules, go to the **Tools --> Schedules** screen and create a new schedule.

✓ Add the ports of 8001, 8101, 9001 to the port forwarding.

D-Link

<b>DIR-835</b> //	<b>SETUP</b>	<b>ADVANCED</b>	<b>TOOLS</b>	<b>STATUS</b>	<b>SUPPORT</b>
-------------------	--------------	-----------------	--------------	---------------	----------------

VIRTUAL SERVER

PORT FORWARDING

APPLICATION RULES

QOS ENGINE

NETWORK FILTER

ACCESS CONTROL

WEBSITE FILTER

INBOUND FILTER

FIREWALL SETTINGS

ROUTING

ADVANCED WIRELESS

WI-FI PROTECTED SETUP

ADVANCED NETWORK

GUEST ZONE

IPv6 FIREWALL

IPv6 ROUTING

**PORT FORWARDING RULES :**  

This option is used to open multiple ports or a range of ports in your router and redirect data through those ports to a single PC on your network. This feature allows you to enter ports in various formats including, Port Ranges (100-150), Individual Ports (80, 68, 888), or Mixed (1020-5000, 689).

Save Settings
Don't Save Settings

**24 -- PORT FORWARDING RULES**

	Name	<<	Application Name	>>	Ports to Open	Schedule
<input checked="" type="checkbox"/>	DVR				TCP	Always
	IP Address		192.168.2.33		UDP	Inbound Filter
						Allow All
<input checked="" type="checkbox"/>	DVR				TCP	Always
	IP Address		192.168.2.33		UDP	Inbound Filter
						Allow All
<input checked="" type="checkbox"/>	DVR				TCP	Always
	IP Address		192.168.2.33		UDP	Inbound Filter
						Allow All
<input type="checkbox"/>					TCP	Always
					UDP	Inbound Filter
						Allow All

**Helpful Hints...**

Check the **Application Name** drop down menu for a list of predefined applications. If you select one of the predefined applications, click the arrow button next to the drop down menu to fill out the corresponding field.

You can select a computer from the list of DHCP clients in the **Computer Name** drop down menu, or you can manually enter the IP address of the LAN computer to which you would like to open the specified port.

Select a schedule for when the rule will be enabled. If you do not see the schedule you need in the list of schedules, go to the **Tools --> Schedules** screen and create a new schedule.

- a) **Name:** fill in a name for MDVR port.
- b) **Ports to Open:** 8001, 8101, 9001

- c) **IP Address:** Server IP address
- d) **Inbound Filter:** TCP、UDP、Allow ALL, Pls select “Allow All”
- e) **Schedule:** select “Always”
- ✓ Fill in the ports, and click” **Save settings**”.

**PORT FORWARDING RULES :**

This option is used to open multiple ports or a range of ports in your router and redirect data through those ports to a single PC on your network. This feature allows you to enter ports in various formats including, Port Ranges (100-150), Individual Ports (80, 68, 888), or Mixed (1020-5000, 689).

Save Settings Don't Save Settings

**24 -- PORT FORWARDING RULES**

Name	IP Address	Ports to Open	Schedule	Inbound Filter
DVR	192.168.2.33	TCP 9001	Always	Allow All
DVR	192.168.2.33	TCP 8101	Always	Allow All
DVR	192.168.2.33	TCP 8001	Always	Allow All

- ✓ After the port mapping settings, find the “**IP Address**” in the WAN, the IP Address is your CMS server IP. login the server IP on the CMS client to access.

**DIR-835**

SETUP ADVANCED TOOLS STATUS

**DEVICE INFORMATION**

All of your Internet and network connection details are displayed on this page. The firmware version is also displayed here.

**GENERAL**

Time : Friday, August 12, 2011 7:29:58 PM  
Firmware Version : 1.00 , 12, Aug, 2011

**WAN**

Connection Type : DHCP Client  
Cable Status : Disconnected  
Network Status : Disconnected  
Connection Up Time : N/A

DHCP Renew DHCP Release

MAC Address : 00:01:23:45:67:8a  
IP Address : 188.38.223.87  
Subnet Mask : 255.255.255.0  
Default Gateway : 188.38.223.87  
Primary DNS Server : 202.96.128.166  
Secondary DNS Server : 202.96.134.133  
Advanced DNS : Disabled

**Notes:** When extranet access into LAN server, it need do mapping on the router. Then extranet can

---

access into WAN IP.

- ✓ Change the Server IP to the related one, Access into MDVR

“menu”→”Network setting”→”LAN”→”Server IP”→XXX.XXX.XXX.XXX



## 6.9 Domain binding setting

After finished the server set up and the port mapping, you can login via network IP.

There are two ways to access the network as follow.

**ADSL dial-up:** It will assign a different dynamic IP address for each dial

**Leased line:** It will assign a static IP address, and you can access directly

So, when set up the server with the way of ADSL dial-up, you can binding DDNS via domain in order to prevent the distribution of different dynamic IP in each dial.

**Note 1 :** DDNS is used to mapping the dynamic IP address to a static DNS. Client program will send the dynamic IP to the server program when the user access the network, then the server program will provide the DNS server to realize dynamic DNS.

**Note 2 :** If the dynamic domain name is free, you will temporarily unable to access via the free domain name when things going wrong with the the domain name service provider's server.

The related parameters below is for routers test. Please refer to actual network environment when installation.

- ✓ Access into router setup, select ”**Dynamic DNS**” to check the related setup.

**D-Link**

DIR-835 // SETUP ADVANCED TOOLS STATUS SUPPORT

ADMIN  
TIME  
SYSLOG  
EMAIL SETTINGS  
SYSTEM  
FIRMWARE  
DYNAMIC DNS  
SYSTEM CHECK  
SCHEDULES

**DYNAMIC DNS**

The DDNS feature allows you to host a server (Web, FTP, Game Server, etc...) using a domain name that you have purchased (www.whateveryournameis.com) with your dynamically assigned IP address. Most broadband Internet Service Providers assign dynamic (changing) IP addresses. Using a DDNS service provider, your friends can enter your host name to connect to your game server no matter what your IP address is.

Sign up for D-Link's Free DDNS service at [www.DLinkDDNS.com](http://www.DLinkDDNS.com).

Save Settings Don't Save Settings Reboot Now

**DYNAMIC DNS SETTINGS**

Enable Dynamic DNS : ☐

Server Address :  << Select Dynamic DNS Server

Host Name :

Username or Key :

Password or Key :

Verify Password or Key :

Timeout : 576 (hours)

Status : Disconnected

**Helpful Hints...**

To use this feature, you must first have a Dynamic DNS account from one of the providers in the drop down menu.

[More...](#)

- a) **Enable Dynamic DNS:** Enable ON if you need to use DDNS
- b) **Server Address:** Fill in accordingly
- c) **Username or Key:** Fill in applied user name
- d) **Password or Key:** Fill in password
- e) **Verify Password or Key:** confirm the password
- f) **Timeout:** Timeout setting
- g) **Status:** Status of connection

**Notes:** DDNS need to be applied by customers if necessary.

- ✓ Fill in the user name and password, use DDNS login, it shows connect successfully if login properly, and will display the applied the DNS.

**Notes:** Pls refer to the Oray for the DNS apply.

- ✓ After DNS binding, you can access into server via DNS.